YAZOO

April 1991

YAZOO YHRLWG24.5 COMMERCIAL MOWER OWNER'S MANUAL

SAFETY SUMMARY

EQUIPMENT DESCRIPTION AND DATA

OPERATING PROCEDURES

TROUBLESHOOTING PROCEDURES

ILLUSTRATED PARTS LIST

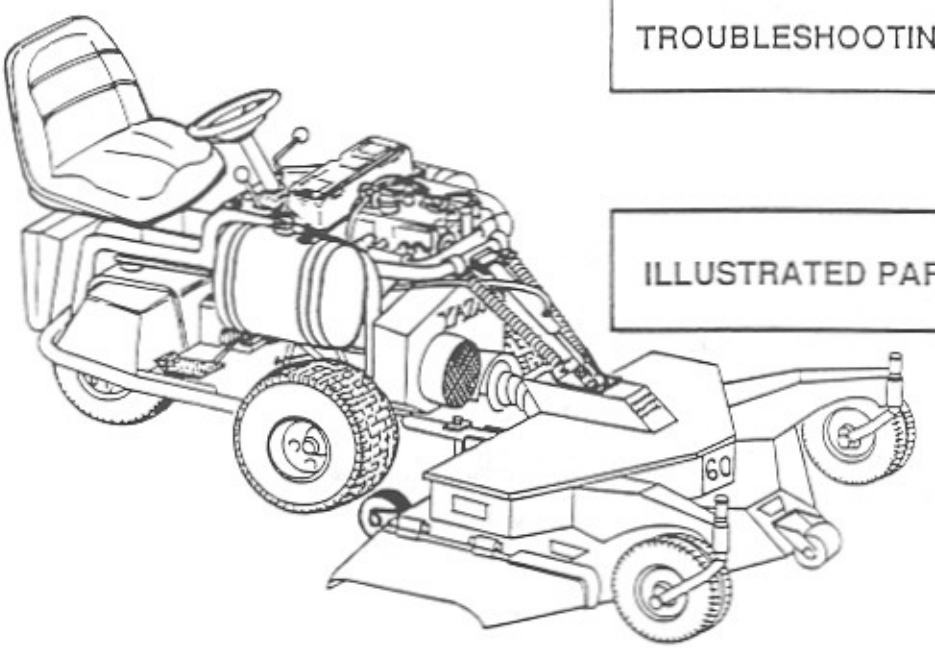

LITERATURE NUMBER 1301-135

0401-110

0401-221

0401-111

CAUTION

A solution of 50% antifreeze and 50% water must be used in this engine.(Freezing point about -34°F) Do not use 100% antifreeze, or severe damage will occur.

19426-67661

CAUTION

Do not use ether or starting fluid. Severe engine damage will occur. 19426-67901

PRECAUTION
IN HANDLING RADIATOR

1. Prior to use, check the water and replenish it. Don't Forget This.
2. When the overflow pipe starts emitting vapor, check the water and replenish it.
3. When dirt and insacts are trapped in the screen. remove the screen and clean it.
4. Check and clean the Fins periodically. Fins clogged with dirt and mud will increase the consumption of water.
5. When the engine is put to continuous use under the brazing sun, inspect the water more often than usual.
6. For further details read the Instruction Manual.

CHOKE
INCLINOMETER
THROTTLE
CAUTION
• BRAKE IS SENSITIVE! APPLY PRESSURE WITH SLOW EVEN MOTION. DO NOT PRESS BRAKE WITH QUICK HARD MOTION.
• HEARING PROTECTION SHOULD BE WORN.
• NEVER MOW ON A SURFACE ANGLE GREATER THAN 15 DEGREES. ALWAYS MOW ACROSS THE FACE ON SLOPES OF 15 DEGREES OR LESS. NEVER UP AND DOWN. DO NOT ATTEMPT SUDDEN STARTS OR STOPS WHEN MOWING ON A SLOPE. AVOID SUDDEN TURNS AND USE EXTREME CAUTION WHEN CHANGING DIRECTIONS ON ANY SLOPE.
401-359

ILLUSTRATED PARTS LISTING

This illustrated parts listing is for the YAZOO YHRLWG24.5 mower manufactured by YAZOO MANUFACTURING COMPANY, P.O. BOX 4449, 3650 BAY STREET, JACKSON, MS 39213.

The purpose of this chapter is to provide a listing, with illustrations, of the parts that comprise, and are necessary for the support of the mower. This section lists the parts as they are assigned to each Figure in the parts listing under the heading "FIGURE KEY NUMBER INDEX". For example, item (KEY) number 34 in Figure 1 will be listed as "1-34" under the "KEY" column along with the part number, name, and quantity(ies) of that item used in that application.

301-145 throttle cable

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-1	1903-021	Seat	1
1-2	1923-029	Switch	1
1-3	0209-114	Bolt, Cap 5/16"-18 x 1"	2
1-4	1916-080	Spring, Seat	1
1-5	2301-008	Washer, Lock 1/2"	2
1-6	0209-494	Bolt, 1/2"-13 x 3/4"	2
1-7	1401-071	Nut, 5/8" SAE Full	1
1-8	2301-010	Washer, Lock 5/8"	1
1-9	2301-028	Washer	1
1-10	2304-009	Weight	1
1-11	P/O ITEM 1-32	Nut	1
1-12	P/O ITEM 1-32	Washer, Star	1
1-13	0706-002	Gauge, Ammeter	1
1-14	0706-003	Gauge, Hour Meter	1
1-15	0301-145	Throttle Control	1
1-16	1807-006	Rivet, Pop	2
1-17	0301-114	Cable, Choke	1
1-18	1901-229	Screw, #10-24 x 1/2"	1
1-19	P/O ITEM 1-17	Washer, Lock	1
1-20	P/O ITEM 1-17	Nut	1
1-21	0902-001	Inclinometer	1
1-22	P/O ITEM 1-15	Nut	1
1-23	P/O ITEM 1-15	Washer	1
1-24	P/O ITEM 1-14	Nut	1
1-25	P/O ITEM 1-14	Washer	1
1-26	P/O ITEM 1-14	Bracket	1
1-27	P/O ITEM 1-13	Bracket	1
1-28	P/O ITEM 1-13	Washer	2
1-29	P/O ITEM 1-13	Nut	2
1-30	2301-284	Washer, Lock	2
1-31	1401-197	Nut	2
1-32	P/O ITEM 3-1	Switch, Panel	1
1-33	0811-049	Harness, Wire	1
1-34	1901-018	Screw,1/4" x 1/2" HD	1
1-35	1923-040	Module	1
1-36	1401-001	Nut, 3/16"	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
1-37	2301-001	Washer, 3/16" Lock	1
1-38	1923-041	Switch, Relay	1
1-39	0103-097	Axle, 3/4" x 10-1/2"	1
1-40	2501-018	Yoke	1
1-41	1401-081	Nut, 3/4"C LOCK	1
1-42	1913-216	Spacer, 1-1/2"	1
1-43	1902-005	Seal	1
1-44	0204-034	Bearing	1
1-45	0312-008	Cone	1
1-46	0807-038	Hub, Rear Wheel	1
1-47	1913-074	Spacer, Rider Rear	1
1-48	2305-018	Wheel Assembly	1
1-49	1401-061	Nut, Tapered 1/2"	5
1-50	1201-098	Lever Assy.,Blade Eng.	1
1-51	1604-042	Pin, Cotter 1/8" x 1"	1
1-52	1401-001	Nut, 3/16" USS	2
1-53	2301-001	Washer, Lock 3/16"	2
1-54	1401-010	Nut, 1/4" USS	1
1-55	2301-003	Washer, 1/4" Lock	1
1-56	1401-010	Nut, 1/4" USS	3
1-57	2301-003	Washer, 1/4" Lock	3
1-58	0209-049	Bolt, 1/4" x 1" NC	1
1-59	0214-489	Bracket, Switch Eng.	1
1-60	1923-025	Switch, Dbl. Pole	1
1-61	0214-490	Bracket, Blade Switch	1
1-62	2301-001	Washer, Lock 3/16"	2
1-63	1401-001	Nut, 3/16" USS	2
1-64	1901-229	Screw #10-24 x .50 Hex	2
1-65	0204-077	Bearing, Pillow Block	1
1-66	0204-077	Bearing, Pillow Block	1
1-67	1904-288	Steering Shaft Wldt	1
1-68	1102-013	Key, Woodruff	1
1-69	0204-161	Bearing, Upper Steer.	1
1-70	2301-081	Washer, 1-1/4" x 3/4"	1
1-71	2301-004	Washer, Lock 5/16"	2
1-72	1401-020	Nut, 5/16" USS	2
1-73	1604-042	Pin, Cotter 1/8" x 1	1
1-74	0208-011	Bolt,#10-24 x 1-3/4"	1
1-75	1604-160	Pin, Roll	1
1-76	1401-002	Nut, Lock	1
1-77	0702-150	Gear, Steer. Pinion	1
1-78	0209-114	Bolt, 5/16"-18 x 1" HH	1
1-79	2301-021	Washer, Flat 5/16"	1
1-80	NOT USED		
1-81	NOT USED		
1-82	NOT USED		
1-83	NOT USED		
1-84	NOT USED		

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
1-85	NOT USED		
1-86	NOT USED		
1-87	NOT USED		
1-88	2301-004	Washer, Lock 5/16"	1
1-89	1401-020	Nut, 5/16" USS	1
1-90	0209-114	Bolt 5/16"-18 x 1" HH	1
1-91	NOT USED		
1-92	0101-162	Adapter Tee	1
1-93	0704-015	Guard, Front	1
1-94	0704-008	Guard, Belt	1
1-95	0209-425	Bolt, 7/16" x 1-1/2"	4
1-96	0603-004	Fitting, Grease	1
1-97	1604-086	Pin, Cotter 3/32" x 1/2"	1
1-98	2301-022	Washer, Flat 3/8"	1
1-99	2301-004	Washer, Lock 5/16"	1
1-100	1401-020	Nut, 5/16" USS	1
1-101	0209-320	Bolt, 3/8" x 1-1/2"	1
1-102	2301-021	Washer, Flat 5/16"	1
1-103	0209-114	Bolt, 5/16"-18 x 1" HH	1
1-104	2301-004	Washer, Lock 5/16"	1
1-105	1401-020	Nut, 5/16" USS	1
1-106	1811-004	Grommet, Rubber	1
1-107	1808-284	Rod, Frt. Engaging	1
1-108	2301-022	Washer, Flat 3/8"	1
1-109	2301-022	Washer, Flat 3/8"	1
1-110	1401-032	Nut, 3/8" SAE NF	1
1-111	2301-031	Washer, Flat 7/16"	4
1-112	2301-007	Washer, Lock 7/16"	4
1-113	1401-040	Nut, 7/16" NC	4
1-114	0502-002	End, Rod	1
1-115	2301-006	Washer, Lock 3/8"	1
1-116	1401-030	Nut, 3/8" USS	1
1-117	1401-051	Nut, Lock 1/2" SAE Full	1
1-118	2301-024	Washer, Flat 1/2"	1
1-119	1913-288	Spacer, Steer. Gear Pvt.	1
1-120	2301-336	Washer, Thrust	1
1-121	1401-051	Nut, Lock 1/2" SAE Full	1
1-122	2301-024	Washer, Flat 1/2"	1
1-123	1913-287	Spacer, Steer Gear Pvt.	1
1-124	0215-181	Bushing, Steer. Gear	1
1-125	1913-206	Spacer, Rear Weight	1
1-126	1811-028	Grommet, Rubber	1
1-127	0209-519	Bolt, 1/2" x 1/2" NF	1
1-128	1401-070	Nut, Jam 5/8" SAE	1
1-129	0502-015	End, Rod	1
1-130	0209-517	Bolt, 1/2" x 2" NF	1
1-131	0209-021	Bolt, 1/4" x 3/4" USS	3
1-132	2301-097	Washer, Thrust	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
1-133	0204-078	Bearing, Thrust	1
1-134	2301-097	Washer, Thrust	1
1-135	0215-101	Bushing	2
1-136	1401-021	Nut, Lock 5/16" USS	2
1-137	2301-021	Washer, Flat 5/16"	2
1-138	1901-229	Screw, #10-24 x 1/2" Hex	2
1-139	1104-012	Knob, 3/8"-16 Thd.	1
1-140	1901-034	Screw, Set 3/8" x 3/4"	1
1-141	0209-510	Bolt, 1/2-20 x 1-3/4" HH	1
1-142	0311-097	Steering Arm Wldt.	1
1-143	1901-034	Screw, Set 3/8" x 3/4"	1
1-144	2301-008	Washer, Lock 1/2"	1
1-145	0502-018	End, Rod	1
1-146	2301-008	Washer, Lock 1/2"	1
1-147	1401-051	Nut, Lock 1/2" SAE NF	1
1-148	1401-054	Nut, Full 1/2" NF	1
1-149	1808-299	Rod, Steering Link	1
1-150	1401-054	Nut, Full 1/2" NF	1
1-151	0502-018	End, Rod	1
1-152	0209-519	Bolt, 1/2" x 1-1/2" NF	1
1-153	2301-008	Washer, Lock 1/2"	1
1-154	1401-051	Nut, Lock 1/2" SAE NF	1
1-155	1901-041	Screw, Self-tap	2
1-156	2303-012	Steering Wheel	1
1-157	2301-096	Washer, Spring 5/8"	1
1-158	1401-050	Nut, Jam 1/2" SAE NF	1
1-159	0806-229	Housing, Steer Shaft	1
1-160	0209-108	Bolt, 5/16"-18 x 3/4"	2
1-161	0605-471	Frame	1
1-162	0209-108	Bolt, 5/16"-18 x 3/4"	2
1-163	1104-012	Knob, 3/8"-16 Thd.	1
1-164	0209-045	Bolt, 1/4"-20 x 1-3/4"	2
1-165	1401-020	Nut, 5/16" USS	2
1-166	2301-004	Washer, Lock 5/16"	2
1-167	0209-126	Bolt, 5/16" x 1-1/2" US	1
1-168	0214-491	Brkt., Valve Mount	1
1-169	1913-286	Spacer, Lever Pivot	1
1-170	1604-162	Pin, Clevis, 3/16" x 13/16"	2
1-171	1204-006	Link, Lift Valve	1
1-172	1201-105	Lever, Wldt Valve	1
1-173	2301-021	Washer, 5/16" Flat	1
1-174	2301-004	Washer, Lock 5/16"	1
1-175	1401-020	Nut, 5/16" USS	1
1-176	1204-006	Link, Lift Valve	1
1-177	1604-092	Pin, Cotter 1/16" x 1"	2
1-178	0101-117	Adaptor	1
1-179	0812-050	Hose	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
1-180	0101-117	Adaptor	1
1-181	0812-072	Hose, Lift Cyl. 45"	1
1-182	1401-009	Nut, 1/4" Lock	2
1-183	2201-037	Cylinder Actuator	1
1-184	0101-159	Adaptor, 90 Degree	1
1-185	0812-050	Hose	1
1-186	0101-159	Adaptor	1
1-187	0812-050	Hose	1
1-188	1604-002	Pin, Cotter 3/32" x 1"	1
1-189	0214-274	Brkt., Lift Cylinder	1
1-190	1604-063	Pin	1
1-191	1604-063	Pin	1
1-192	1604-002	Pin, Cotter 3/32" x 1"	1
1-193	0101-116	Adaptor	1
1-194	0319-002	Cylinder	1
1-195	0101-118	Adaptor	1
1-196	0101-118	Adaptor	1
1-197	0215-182	Bushing, Steering	1
1-198	2003-006	Tire, 18 x 9.5	1
1-199	1805-012	Rim Beaded	1
1-200	1102-002	Key, 1/4" x 1/4" x 1"	1
1-201	0702-149	Gear, Wldt Steering	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-1	1602-011	Pedal	1
2-2	1601-001	Pad	1
2-3	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-4	0209-114	Bolt, 5/16"-18 x 1" HH	1
2-5	0214-153	Bracket, Brake Pedal	1
2-6	2301-004	Washer, Lock 5/16"	1
2-7	1401-020	Nut, 5/16" USS	1
2-8	2301-022	Washer, Flat 3/8"	1
2-9	1401-021	Nut, Lock 5/16" USS	1
2-10	0603-004	Fitting, Grease	1
2-11	1604-002	Pin, Cotter 3/32" x 1"	1
2-12	0209-114	Bolt, 5/16"-18 x 1" HH	1
2-13	0501-019	Elbow, Drain Assembly	1
2-14	1606-038	Plug, Square 3/8"	1
2-15	0812-	Hose, Oil Drain	1
2-16	1401-020	Nut, 5/16" USS	1
2-17	2301-004	Washer, Lock 5/16"	1
2-18	1604-061	Pin, Clevis	1
2-19	2501-030	Yoke	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-20	1401-030	Nut, 3/8" USS	1
2-21	1808-300	Rod, Blade Engaging	1
2-22	2301-004	Washer, Lock 5/16"	1
2-23	1401-020	Nut, 5/16" USS	1
2-24	0101-	Bushing, Pipe	1
2-25	1808-200	Rod, Brake Hydro	2
2-26	2301-021	Washer, Flat 5/16"	2
2-27	1604-086	Pin, Cotter 3/32" x 1/2"	2
2-28	0217-018	Kit, Brake Drum	2
2-29	2305-022	Wheel, Assembly	2
2-30	1401-061	Nut, Tapered 1/2"	10
2-31	1805-026	Rim, Beaded Front	2
2-32	2003-067	Tire, 16 x 6.5	2
2-33	1604-086	Pin, Cotter 3/32" x 1/2"	2
2-34	2301-021	Washer, Flat 5/16"	2
2-35	2501-027	Yoke	2
2-36	1604-013	Pin, 5/16" x 1-1/4" Roll	2
2-37	0209-350	Bolt, 3/8" x 2-1/2" NC HH	4
2-38	1401-020	Nut, 5/16" USS	2
2-39	2301-004	Washer, Lock 5/16"	2
2-40	0704-367	Guard, Oil Filter	1
2-41	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-42	2301-021	Washer, Flat 5/16"	1
2-43	2301-006	Washer, Lock 3/8"	4
2-44	1401-030	Nut, 3/8" USS	4
2-45	1401-069	Nut, Jam 5/8"	2
2-46	2301-011	Washer, Star	2
2-47	0209-617	Bolt	2
2-48	1916-116	Spring	1
2-49	0212-003	Bolt, Eye 3/16" x 2"	1
2-50	1401-002	Nut, Lock 3/16"-24	1
2-51	0102-152	Arm, Engaging Assembly	1
2-52	0204-019	Bearing, Hub 5/8" ID	1
2-53	1608-148	Pulley, Engine Idler	1
2-54	0204-019	Bearing, Hub 5/8" ID	1
2-55	1401-072	Nut, Flex Lock 5/8" SAE	1
2-56	1401-030	Nut, 3/8" USS	1
2-57	1604-103	Pin, Brake Band	1
2-58	0205-538	Belt, Drive	1
2-59	0205-538	Belt, Drive	1
2-60	0215-175	Bushing	1
2-61	1102-058	Key, 1/4" x 1/4" x 4"	1
2-62	0209-021	Bolt, 1/4" x 3/4" USS	4
2-63	1608-119	Pulley, PTO	1
2-64	1901-136	Screw, Set 5/16" x 1"	1
2-65	0205-534	Belt, Pump	1
2-66	1901-136	Screw, Set 5/16" x 1"	1
2-67	1604-086	Pin, Cotter 3/32" x 1/2"	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-68	0217-020	Brake, Band	1
2-69	1604-086	Pin, cotter 3/32" x 1/2"	1
2-70	1806-008	Ring, Snap	1
2-71	0214-276	Bracket, Brake Band	1
2-72	1904-191	Shaft, Pulley PTO	1
2-73	1401-032	Nut, 3/8" SAE	1
2-74	1916-174	Spring	1
2-75	1401-072	Nut, Lock 5/8" SAE	1
2-76	0603-004	Fitting, Grease	1
2-77	0209-341	Bolt, 3/8" x 2" NF	1
2-78	1401-051	Nut, Lock Full 1/2" NF	1
2-79	0209-108	Bolt, 5/16" x 3/4" USS	1
2-80	1608-365	Pulley, Plastic Idler	1
2-81	0209-517	Bolt, 1/2" x 2" NF	1
2-82	1913-200	Spacer, 1-1/8" x 7/8"	1
2-83	1401-070	Nut, Jam 5/8"	1
2-84	1913-040	Spacer	2
2-85	1913-040	Spacer	2
2-86	0215-177	Bushing	1
2-87	0102-133	Arm, Idler Assembly	1
2-88	1913-095	Spacer	1
2-89	1916-161	Spring	1
2-90	1401-020	Nut, 5/16" USS	1
2-91	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-92	1916-177	Spring, Small	1
2-93	1604-160	Pin, Roll 16 MM x 35 MM	1
2-94	0209-049	Bolt, 1/4" x 1"	1
2-95	2301-020	Washer, Flat 1/4"	1
2-96	0214-467	Bracket, Actuator	1
2-97	1806-008	Ring, Snap	1
2-98	0214-453	Brkt., Neutral Retainer	1
2-99	0214-453	Brkt., Neutral Retainer	1
2-100	0102-135	Arm, Forward/Reverse	1
2-101	1401-002	Nut, Lock 3/16"-24	1
2-102	2301-001	Washer, Lock 3/16"	1
2-103	2301-003	Washer, Lock 1/4"	1
2-104	1401-010	Nut, 1/4" USS	1
2-105	1401-030	Nut, 3/8" USS	1
2-106	0209-049	Bolt, 1/4"-20 x 1.00	1
2-107	0102-149	Arm, Bypass Valve	1
2-108	1401-010	Nut, 1/4"-20	1
2-109	1401-001	Nut, #10-24	1
2-110	2301-001	Washer, Lock 3/16"	1
2-111	2301-005	Washer, Start 5/16"	1
2-112	1401-010	Nut, 1/4"-20	1
2-113	0307-004	Clamp, Cable	1
2-114	1901-229	Screw, #10-24 x 1/2"	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-115	0209-021	Bolt, 1/4" x 3/4" USS	2
2-116	2301-003	Washer, Lock 1/4"	2
2-117	2301-020	Washer, Flat 1/4"	2
2-118	0612-006	Fan, Blower (Eaton)	1
2-119	1901-006	Screw, Set 5/16" x 1"	1
2-120	1608-407	Pulley, Transmission	1
2-121	1102-059	Key, 5MM x 1.250	1
2-122	2301-020	Washer, Flat 1/4"	2
2-123	0209-161	Bolt, 5/16" x 3"	2
2-124	0209-831	Bolt, 5/16" x 5-1/4"	2
2-125	2301-020	Washer, Flat 1/4"	2
2-126	2006-077	Trans., BDU21L-310 (P/O ITEM 2-128)	1
2-127	1902-073	O-ring	1
2-128	2006-	Assy., Hydro Transmission	1
2-129	1601-004	Pad, Foot 6" x 12"	1
2-130	0215-183	Bushing, Std Pipe Thread	1
2-131	1606-069	Plug	1
2-132	0315-012	Cup, Oil Breather	1
2-133	0209-834	Bolt	1
2-134	2301-296	Washer, Flat 3/16"	1
2-135	0101-154	Fitting, Hose	1
2-136	1806-145	O-ring	1
2-137	0307-039	Clamp, Hose	1
2-138	0812-067	Hose	1
2-139	0307-039	Clamp, Hose	1
2-140	0101-153	Fitting, Hose	1
2-141	0101-155	Adaptor	1
2-142	0610-018	Filter, Trans. Oil	1
2-143	1808-283	Rod, Direct Cont.	1
2-144	1401-032	Nut, 3/8" SAE	1
2-145	0502-017	End, Rod	1
2-146	1401-020	Nut, 5/16" USS	1
2-147	1401-021	Nut, Lock 5/16" USS	1
2-148	1602-024	Pedal, Direct. Control	1
2-149	1601-017	Pad, Hydro Pedal	1
2-150	0209-181	Bolt, 5/16" x 3-3/4"	1
2-151	1401-032	Nut, 3/8" SAE	1
2-152	1604-157	Pin, Switch	1
2-153	0209-350	Bolt, 3/8"-16 x 2-1/2"	1
2-154	0100-008	Actuator, Switch	1
2-155	1401-030	Nut, 3/8" USS	1
2-156	1401-020	Nut, 5/16" USS	1
2-157	1401-020	Nut, 5/16" USS	1
2-158	0209-114	Bolt, 5/16"-18 x 1" HHx 1" NC	1
2-159	1916-175	Spring	1
2-160	1901-229	Screw	2

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-161	1923-025	Switch, Pole	1
2-162	2301-001	Washer, Lock 3/16"	2
2-163	1401-001	Nut, 3/16" USS	2
2-164	0214-493	Bracket, Switch	1
2-165	2301-004	Washer, Lock 5/16"	1
2-166	1401-020	Nut, 5/16" USS	1
2-167	0209-138	Bolt, 5/16" x 2"	1
2-168	2501-027	Yoke	1
2-169	1401-020	Nut, 5/16" USS	1
2-170	1808-287	Rod	1
2-171	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-172	2301-021	Washer, Flat 5/16"	1
2-173	0209-114	Bolt, 5/16"-18 x 1" HH	1
2-174	2301-021	Washer, Flat 5/16"	1
2-175	0214-206	Bracket	1
2-176	1401-030	Nut, 3/8" USS	1
2-177	2301-006	Washer, Lock 3/8"	1
2-178	0209-108	Bolt	1
2-179	0209-114	Bolt, 5/16"-18 x 1" HH	2
2-180	1401-010	Nut, 1/4" USS	1
2-181	1401-010	Nut, 1/4" USS	1
2-182	0209-050	Bolt, 1/4" x 2"	1
2-183	1916-012	Spring	1
2-184	1401-021	Nut, Lock 5/16" USS	1
2-185	0209-108	Bolt, 5/16" x 3/4" USS	1
2-186	0217-012	Brake, Locking Latch	1
2-187	1913-240	Spacer, Idler Pulley	1
2-188	1913-040	Spacer	4
2-189	1913-040	Spacer	4

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
3-1	E-261	Engine Kubota WG750-B	1
3-2	P/O ITEM 3-1	Coil	1
3-3	P/O ITEM 3-1	Bracket	1
3-4	P/O ITEM 3-1	Bolt	2
3-5	P/O ITEM 3-1	Nut	2
3-6	P/O ITEM 3-1	Washer	2
3-7	NOT USED		
3-8	NOT USED		
3-9	NOT USED		
3-10	0214-194	Bracket, Engine-Radiator	1
3-11	NOT USED		
3-12	NOT USED		

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
3-13	NOT USED		
3-14	0209-150	Bolt, 5/16"-18 x 2-1/2	1
3-15	2301-004	Washer, 5/16" Lock	1
3-16	1401-020	Nut, 5/16" USS	1
3-17	1401-020	Nut, 5/16" USS	1
3-18	2301-004	Washer, 5/16" Lock	1
3-19	2301-021	Washer, 5/16" Flat	1
3-20	1929-004	Shock, Spacer Muffler	1
3-21	1929-004	Shock, Spacer Muffler	1
3-22	1929-004	Shock, Spacer Muffler	1
3-23	1304-028	Muffler	1
3-24	1929-004	Shock, Spacer Muffler	1
3-25	2301-021	Washer, 5/16" Flat	1
3-26	0209-150	Bolt, 5/16"-18 x 2-1/2"	1
3-27	0209-831	Bolt, 8MM-1.25 Pitch x 24MM	2
3-28	2301-004	Washer, 5/16" Lock	2
3-29	0209-120	Bolt, 5/16" x 1-1/4"	3
3-30	0314-004	Cover, Engine Flywheel	1
3-31	2301-004	Washer, 5/16" Lock	3
3-32	1401-020	Nut, 5/16" USS	3
3-33	0214-186	Bracket, Engine Radiator	1
3-34	P/O ITEM 3-1	Voltage Regulator	1
3-35	P/O ITEM 3-1	Bolt	2
3-36	0301-140-001	Cap, Battery Black	1
3-37	0301-140	Cable, Battery Black	1
3-38	0301-142-001	Cap, Battery Red	1
3-39	0301-142	Cable, Battery Red	1
3-40	P/O ITEM 3-1	Washer	2
3-41	P/O ITEM 3-1	Nut	2
3-42	0214-188	Bracket	1
3-43	0314-032	Screen, Radiator	1
3-44	P/O ITEM 3-1	Washer, Flat	2

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
4-1	0214-479	Bracket,Tank Stabilizer L.S.	1
4-2	P/O ITEM 3-1	Fuel Pump	1
4-3	P/O ITEM 3-1	Bolt	2
4-4	0214-455	Bracket, Tank Mount L.H.	1
4-5	0209-032	Bolt, 1/4 x 1"	2
4-6	1811-004	Grommet, Rubber	1
4-7	1918-022	Strap, Tank Mount	1
4-8	2001-023	Tank, Fuel	1
4-9	1918-022	Strap, Tank	1
4-10	2301-003	Washer, 1/4" Lock	2
4-11	1401-010	Nut, 1/4" USS	2

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER

KEY	PART NUMBER	DESCRIPTION	QTY
4-12	P/O ITEM 3-1	Cap	1
4-13	P/O ITEM 3-1	Bolt	1
4-14	P/O ITEM 3-1	Clamp	1
4-15	P/O ITEM 3-1	Nut	1
4-16	P/O ITEM 3-1	Wing Nut	1
4-17	P/O ITEM 3-1	Inner Cap	1
4-18	P/O ITEM 3-1	Cap	1
4-19	P/O ITEM 3-1	Filter Element	1
4-20	P/O ITEM 3-1	Air Cleaner	1
4-21	P/O ITEM 3-1	Clamp	1
4-22	P/O ITEM 3-1	Hose	1
4-23	P/O ITEM 3-1	Clamp	1
4-24	1901-011	Screw, Set 5/16" x 5/16"	1
4-25	1102-028	Key, 1/4" x 1/4" x 1-1/2"	1
4-26	1608-129	Pulley, Engine	1
4-27	1901-011	Screw, Set 5/16" x 5/16"	1
4-28	1929-001	Shock, Spacer	4
4-29	0214-183	Bracket, Motor Mount	2
4-30	2301-008	Washer, 1/2" Lock	4
4-31	1401-054	Nut, 1/2"-20	4
4-32	0214-184	Bracket Motor Mount	2
4-33	1401-054	Nut, 1/2"-20	1
4-34	2301-008	Washer, 1/2" Lock	1
4-35	1929-001	Shock Spacer	1
4-36	2301-335	Washer, 1/2" x 1-3/4" Flat	1
4-37	0209-534	Bolt, 1/2" x 2-3/4"	1
4-38	P/O ITEM 3-1	Bolt	1
4-39	P/O ITEM 3-1	Rubber Insert	1
4-40	P/O ITEM 3-1	Clamp	1
4-41	P/O ITEM 3-1	Washer	1
4-42	P/O ITEM 3-1	Nut	1
4-43	P/O ITEM	Nut	1
4-44	P/O ITEM	Washer	1
4-45	0209-114	Bolt, 5/16" x 1"	2
4-46	0209-534	Bolt, 1/2" x 2-3/4" SAE	4
4-47	P/O ITEM 3-1	Washer, Flat	2
4-48	P/O ITEM 3-1	Washer, Lock	2
4-49	P/O ITEM 3-1	Bolt	2
4-50	0307-026	Clamp, Hose	1
4-51	0812-076	Hose, Tank To Valve	1
4-52	0307-026	Clamp, Hose	1
4-53	2201-030	Valve, Fuel Shutoff	1
4-54	0307-026	Clamp, Hose	1
4-55	0812-082	Hose, Fuel	1
4-56	0307-026	Clamp, Hose	1
4-57	0610-011	Filter, Fuel	1
4-58	0307-026	Clamp, Hose	1
4-59	0209-032	Bolt, 1/4" x 1"	2

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
4-60	0214-189	Bracket, Tank Mount R.H.	1
4-61	0209-114	Bolt, 5/16" x 1"	2
4-62	1401-020	Nut, 5/16" USS	4
4-63	2301-004	Washer, 5/16" Lock	4
4-64	0301-035	Cable, Relief Valve	1
4-65	1918-022	Strap, tank Mount	2
4-66	2301-003	Washer, 1/4" lock	2
4-67	1401-010	Nut, 1/4" USS	2
4-68	1811-004	Grommet, Rubber	1
4-69	2001-023	Tank, Fuel	1
4-70	2301-021	Washer, 5/16" Flat	1
4-71	0812-076	Hose, Fuel Line	1
4-72	0307-026	Clamp Hose	1
4-73	0214-008	Brace, Fuel Tank	1
4-74	2301-006	Washer, 3/8" Lock	1
4-75	1401-030	Nut, 3/8" USS	1
4-76	2301-004	Washer, 5/16" Lock	2
4-77	1401-020	Nut, 5/16" USS	2
4-78	0209-835	Bolt, 5/16"-18 x 2"	4
4-79	2301-004	Washer, 5/16" Lock	2
4-80	1401-020	Nut, 5/16" USS	2
4-81	0812-083	Hose, Fuel Line	1
4-82	2301-021	Washer, 5/16" Falt	2
4-83	0230-001	Light, Temperature Warning	1
4-84	1918-022	Strap, Tank Mount	1
4-85	P/O ITEM 3-1	Tank, Over Flow	1
4-86	0314-031	Cover, Radiator	1
4-87	2301-335	Washer, 1/2" x 1-3/4" Flat	4
4-88	1937-002	Sender, Temperature	1
4-89	P/O ITEM 4-83	Washer	1
4-90	P/O ITEM 4-83	Nut	1
4-91	0230-001	Light, Oil Pressure	1
4-92	P/O ITEM 4-91	Washer	1
4-93	P/O ITEM 4-91	Nut	1
4-94	0307-026	Clamp, Hose	1
4-95	P/O ITEM 3-1	Bolt	12
4-96	P/O ITEM 3-1	Washer	12

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
5-1	1201-095	Assy., Park. Br. Lever	2
5-2	1906-015	Shield, Dust	2
5-3	1901-216	Assy., Adj. Screw Nut	2

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
5-4	1916-145	Spring, Adj Screw (blue)	2
5-5	1908-013	Assy., Shoe and Lining	2
5-6	1908-012	Assy.,Shoe and Lining	2
5-7	1604-133	Retainer, Lever Pin	2
5-8	1916-144	Spring, Shoe Ret. (RH) Red	2
5-9	1604-133	Retainer, Lever Pin	2
5-10	1916-143	Spring, Shoe Ret.(LH) Grn.	2
5-11	1935-003	Torque Spider, Finished	2
5-12	1401-020	Nut, 5/16" USS	8
5-13	2301-004	Washer, Lock 5/16"	8
5-14	0209-120	Bolt, 5/16" x 1-1/4"	8

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
6-1	0401-136	Decal, Brake	1
6-2	0401-368	Decal, Instr. Panel Lower	1
6-3	0401-381	Decal, Instr. Panel	1
6-4	0401-358	Decal, Gasoline	2
6-5	13-10021-00 Weasler	Decal, Rot. Driveline	1
6-6	0401-111	Decal, Danger Blade	2
6-7	0401-221	Decal, ANSI B71.4 Std.	1
6-8	0401-110	Decal, Chute Guard	1
6-9	0401-367	Decal, Grd. Spd. Cont.	1
6-10	0401-383	Decal, Hydrostatic 24.5 HP	1
6-11	P/O ITEM 3-1	Decal, Caution Not Use Ether	1
6-12	P/O ITEM 3-1	Decal, Caution Antifreeze	1
6-13	P/O ITEM 3-1	Decal, Precaution Radiator	1
6-14	0401-384	Decal, Danger Rotating Blade	2
6-15	0401-385	Decal, Danger Guards	2

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
7-1	1913-283	Spacer, Transmission	1
7-2	1806-144	Ring, Snap	1
7-3	0702-148	Gear, Mitre	1
7-4	0204-040	Bearing, Ball	1
7-5	1913-268	Spacer, Transaxle	1
7-6	0702-147	Gear, Mitre	1
7-7	1904-154	Shaft, Internal Drive	1
7-8	0702-057	Gear, Transmission	1
7-9	0204-040	Bearing, Ball	1
7-10	0315-012	Cup, Oil Breather	1
7-11	1904-154	Shaft, Internal Drive	1

ILLUSTRATED PARTS LISTING

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
7-12	0204-040	Bearing, Ball	1
7-13	0702-053	Gear, Transmission	1
7-14	1913-268	Spacer, Transaxle	1
7-15	0702-052	Gear, Transmission	1
7-16	1913-269	Spacer, Transaxle	1
7-17	0204-040	Bearing, Ball	1
7-18	0304-157	Case, Half Deep	1
7-19	0701-022	Gasket	1
7-20	0806-336	Housing, Axle	1
7-21	0209-307	Bolt, 3/8" x 3/4" NC	6
7-22	2301-006	Washer, Lock 3/8"	6
7-23	1102-013	Key, Woodruff	1
7-24	1606-070	Plug, Drain	1
7-25	0103-112	Axle, Short	1
7-26	0204-039	Bearing, Differential	1
7-27	0702-054	Gear, Transmission	1
7-28	2301-006	Washer, Lock 3/8"	2
7-29	0209-318	Bolt, 3/8" x 1" NF HE	2
7-30	1913-034	Spacer, Differential	1
7-31	0204-039	Bearing, Differential	1
7-32	0304-156	Case, Half Shallow	1
7-33	0209-120	Bolt, 5/16" x 1"	17
7-34	0701-022	Gasket	1
7-35	0806-091	Housing, Axle Long	1
7-36	2301-006	Washer, Lock 3/8"	6
7-37	0209-307	Bolt, 3/8" x 3/4" NC	6
7-38	0403-003	Differential	1
7-39	1401-071	Nut, Full 5/8" SAE	10
7-40	2301-096	Washer, Cut 5/8"	10
7-41	1806-001	O-ring, 1/4" x 1"	2
7-42	0807-036	Hub Drive Wheel	2
7-43	1902-012	Seal, Axle	2
7-44	1902-012	Seal, Axle	2
7-45	1207-025	Ring, Lock	2
7-46	0204-038	Bearing, Axle	2
7-47	1102-013	Key, Woodruff	1
7-48	0103-090	Axle, Long	1
7-49	0701-103	Gasket, Case	1
7-50	2301-004	Washer, Lock 5/16"	17
7-51	1401-020	Nut, 5/16" USS	17
7-52	1401-128	Nut, Conduit 1/2"	1
7-53	0215-183	Bushing	1
7-54	NOT USED		
7-55	0204-159	Bearing, Ball	1

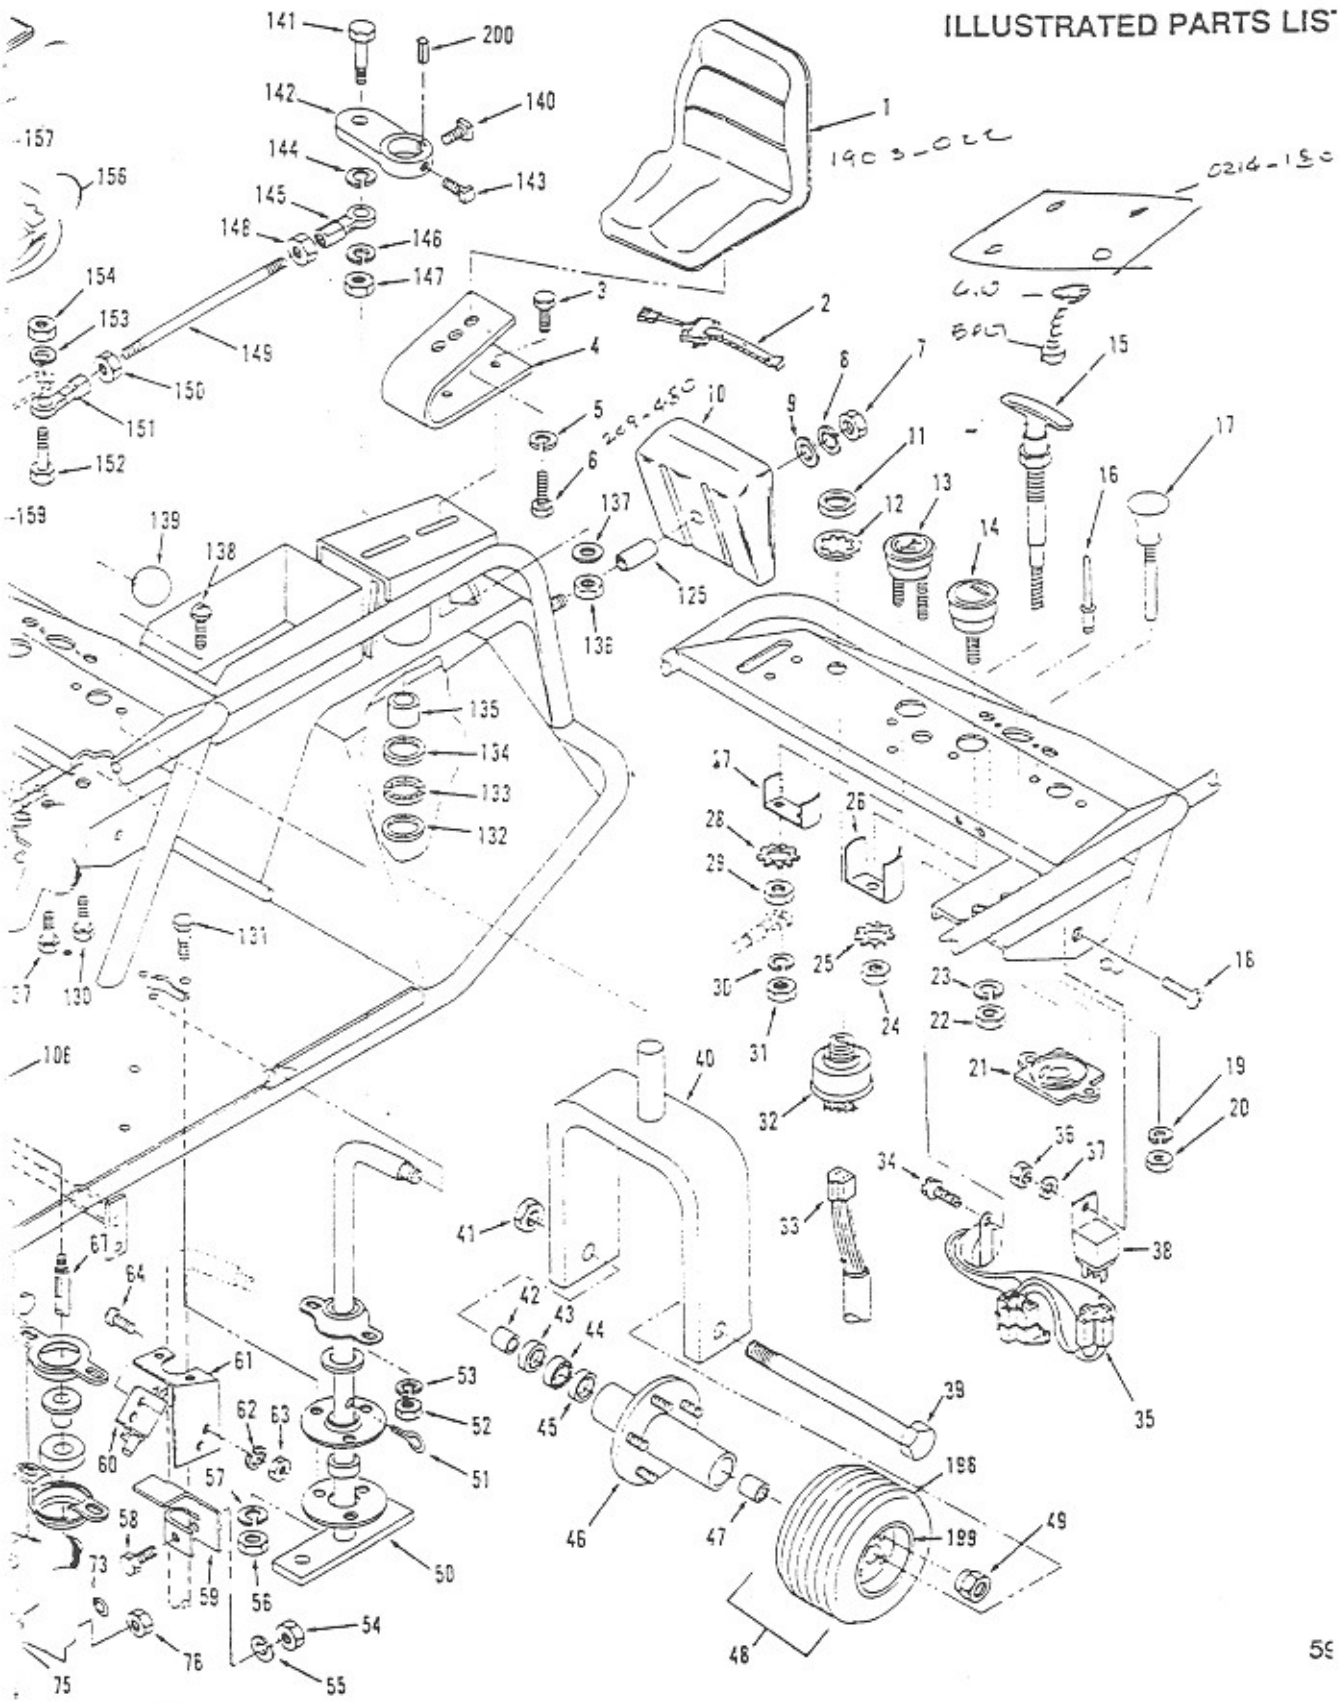
ILLUSTRATED PARTS LIS
141
200
142
140
144
143
145
146
148
147
154
153
149
150
151
152
156
157
159
139
138
137
125
136
135
134
133
132
131
130
127
108
1
3
2
4
5
6
10
9
8
7
11
12
13
14
15
16
17
18
47
26
28
29
30
31
25
24
23
22
21
19
20
32
40
41
42
43
44
45
46
47
48
39
198
199
49
34
36
37
38
35
33
61
64
61
62
63
60
57
58
73
59
56
50
53
52
51
54
55
76
75
0214-150
6.0
BALL

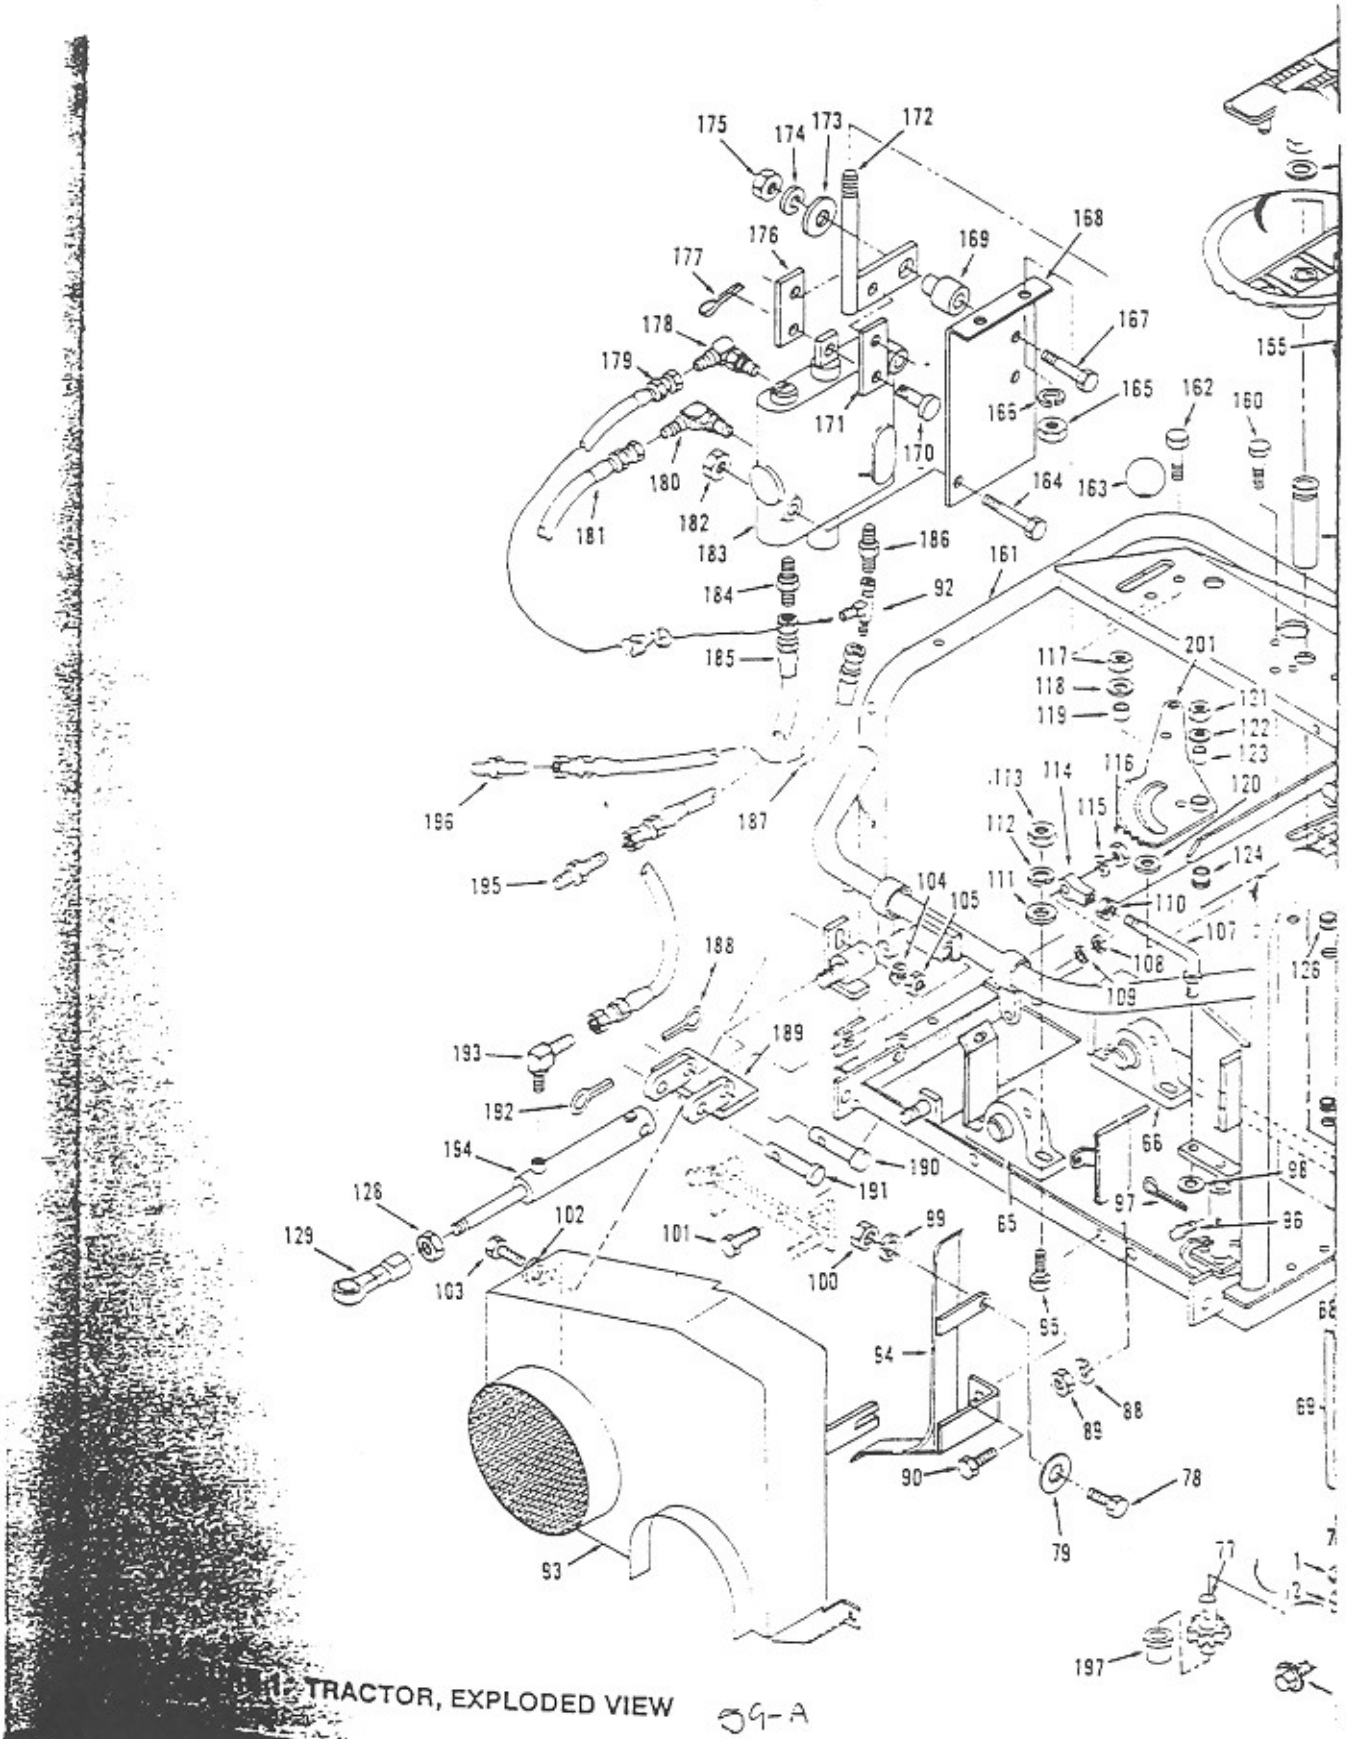

TRACTOR, EXPLODED VIEW 59-A

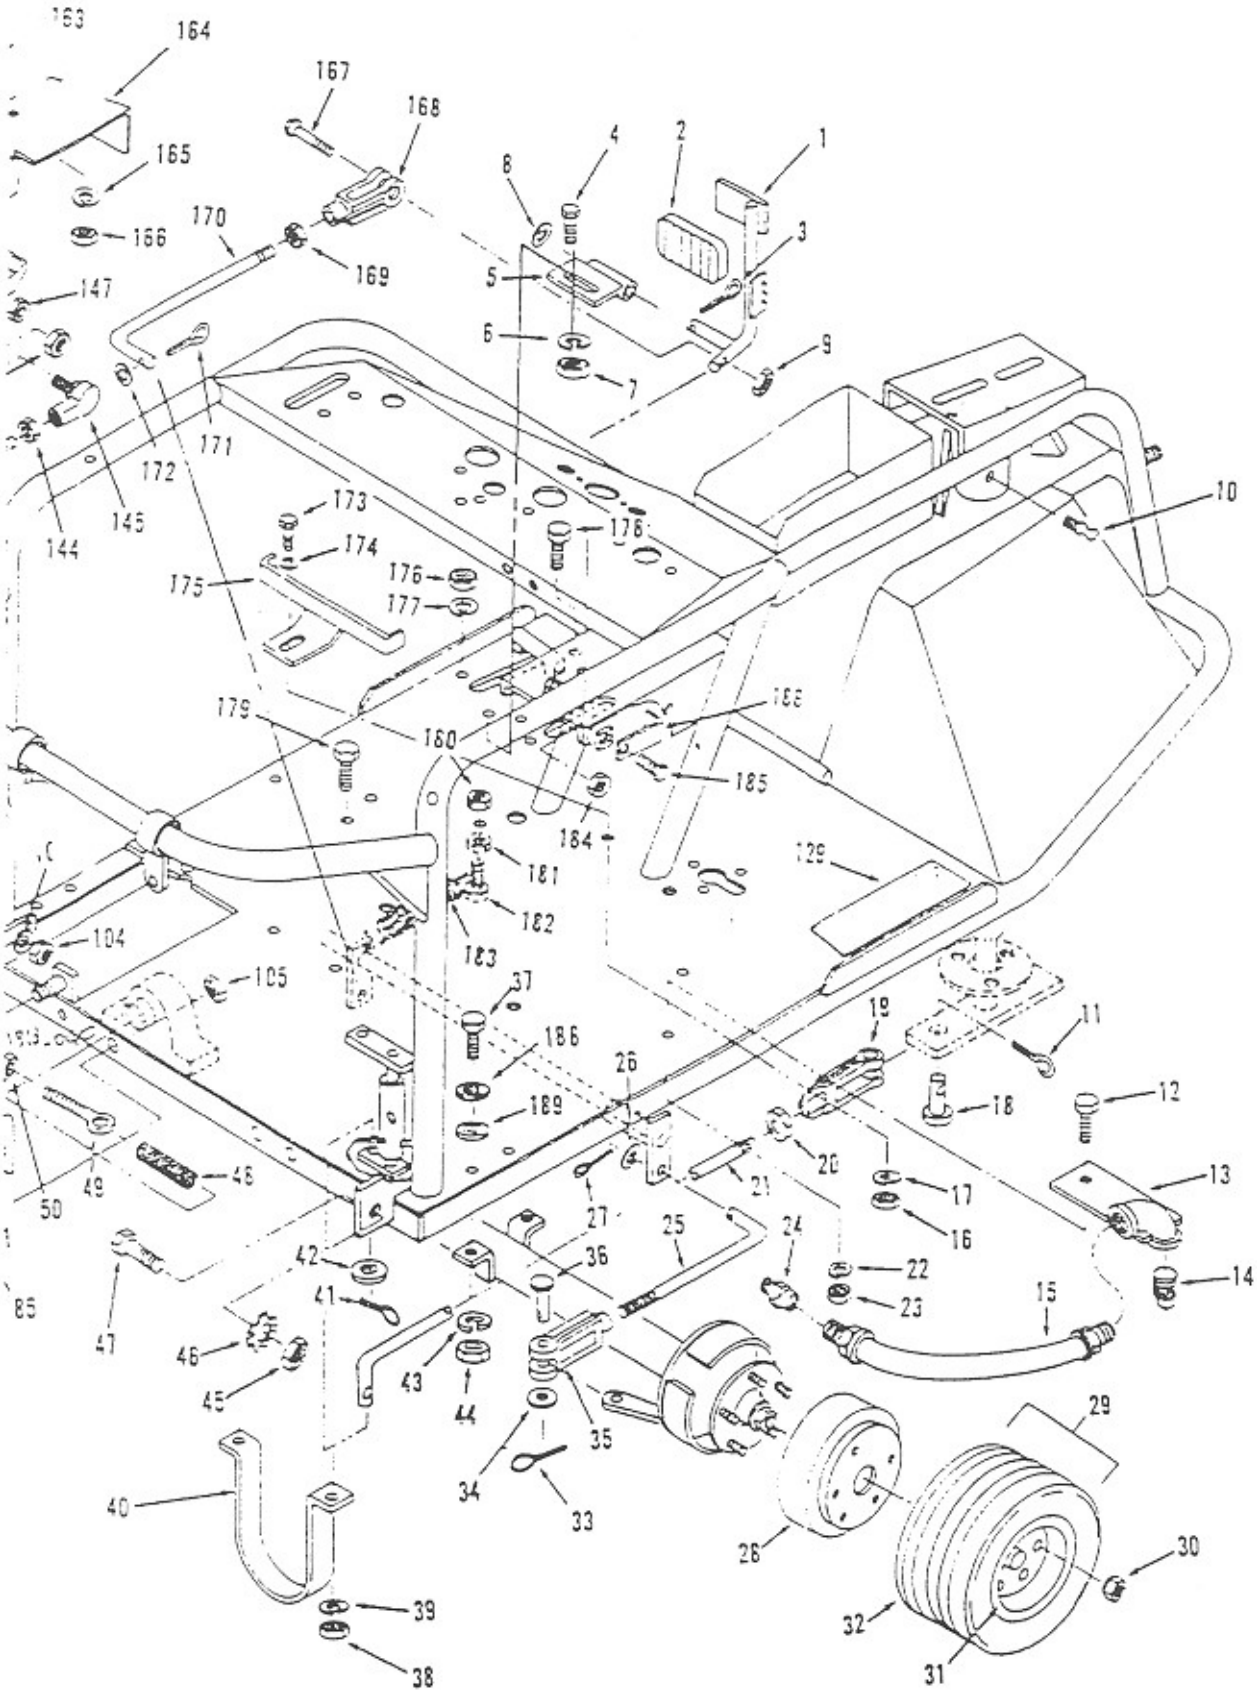
163
164
167
168
165
166
170
169
147
171
172
145
144
173
174
175
176
177
179
180
181
182
183
184
185
186
189
104
105
37
19
11
26
18
12
20
21
17
16
13
14
22
23
15
24
25
27
36
42
41
43
44
35
34
33
40
39
38
45
46
47
48
49
50
85
1
2
3
4
5
6
7
8
9
10
129
26
29
30
31
32

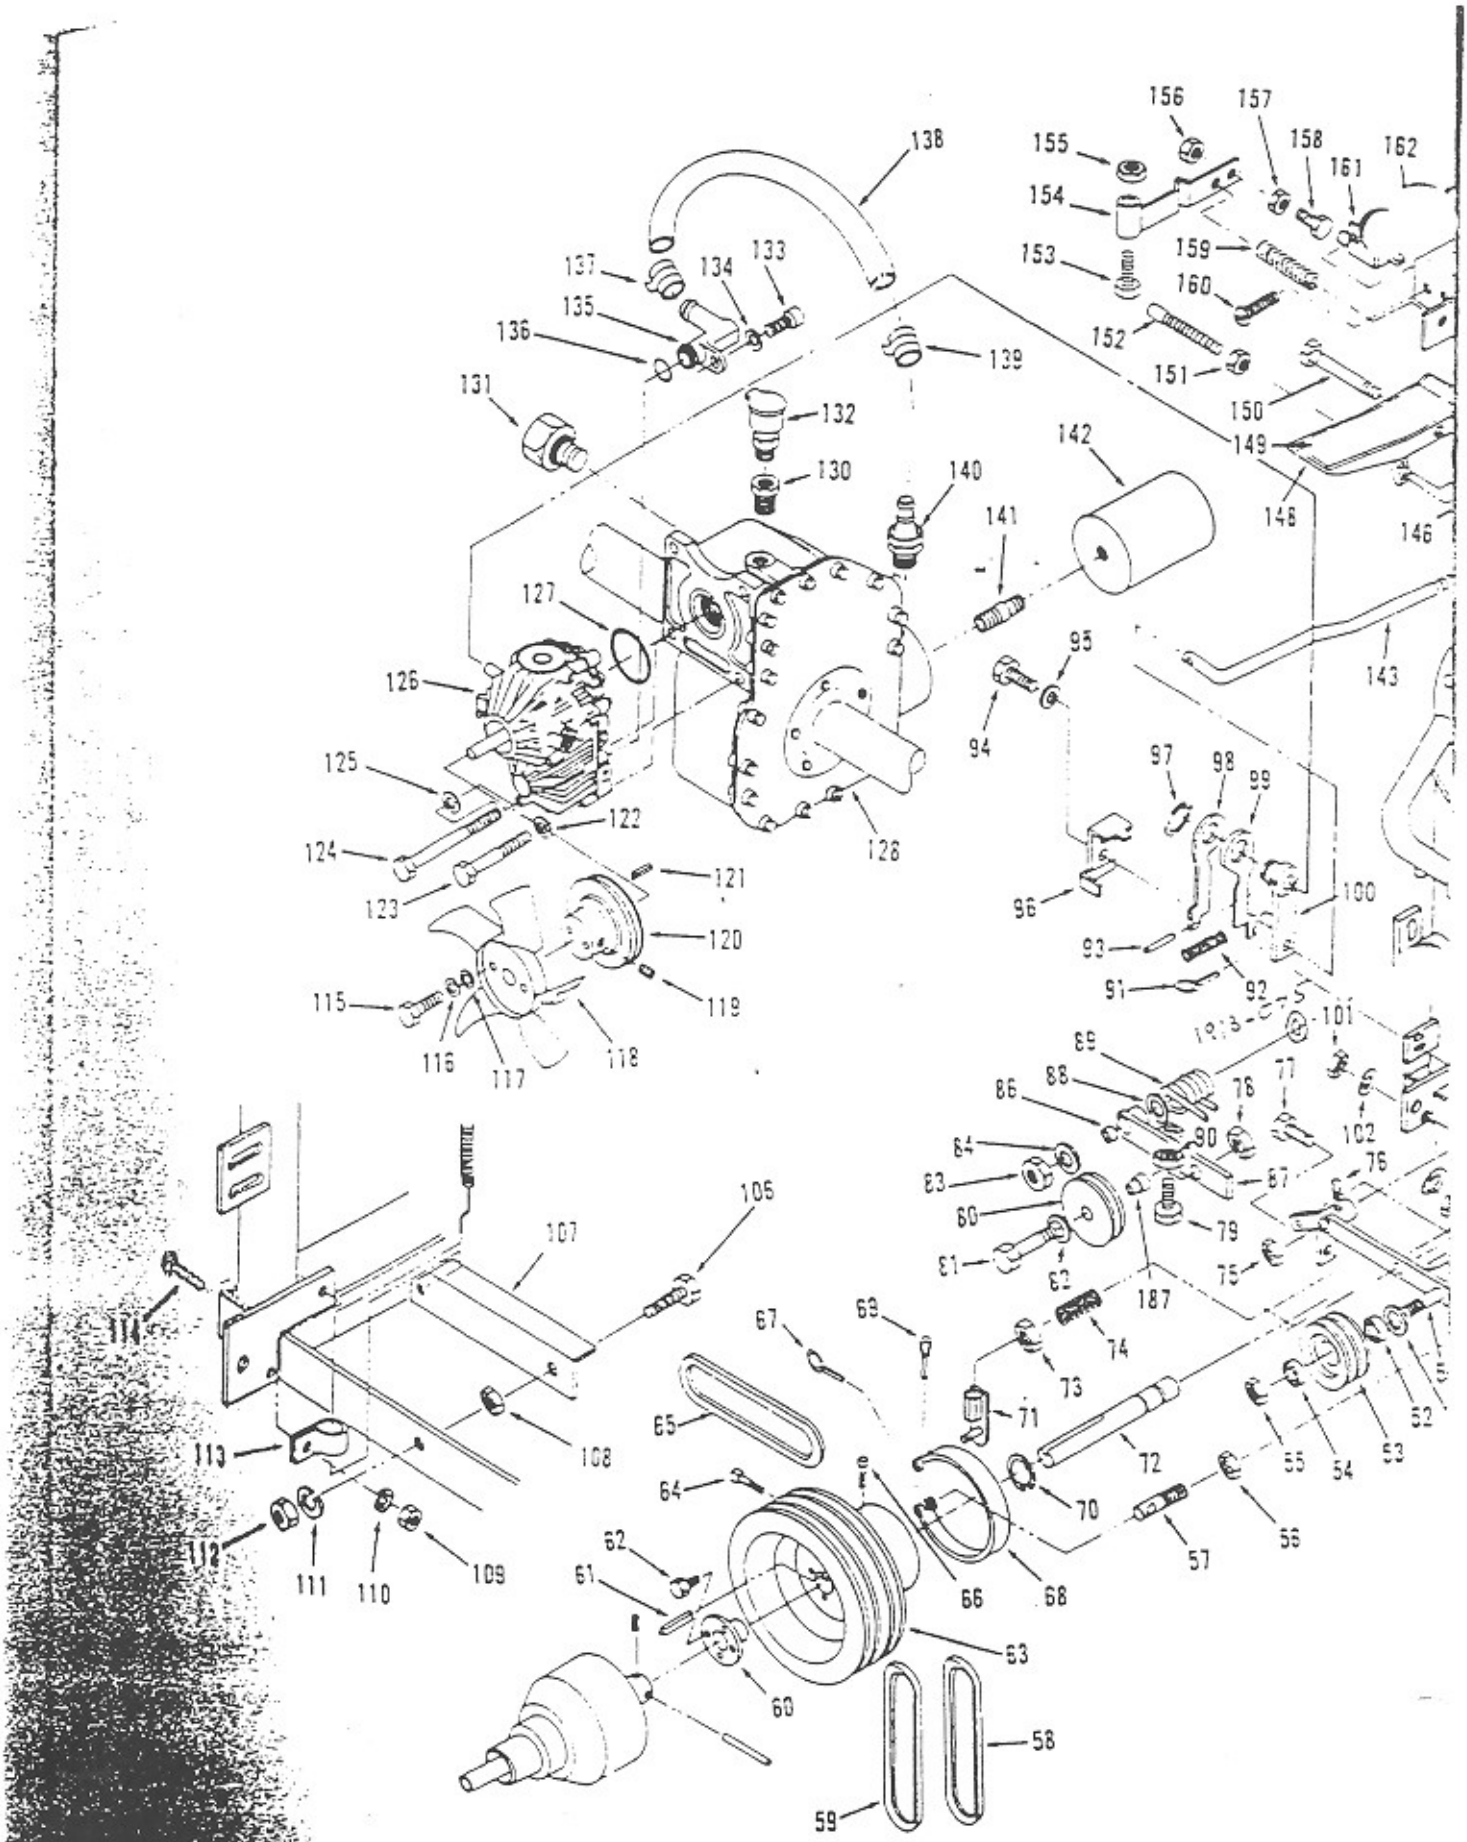

TRACTOR, EXPLODED VIEW

60-A

ILLUSTRATED PARTS LIST

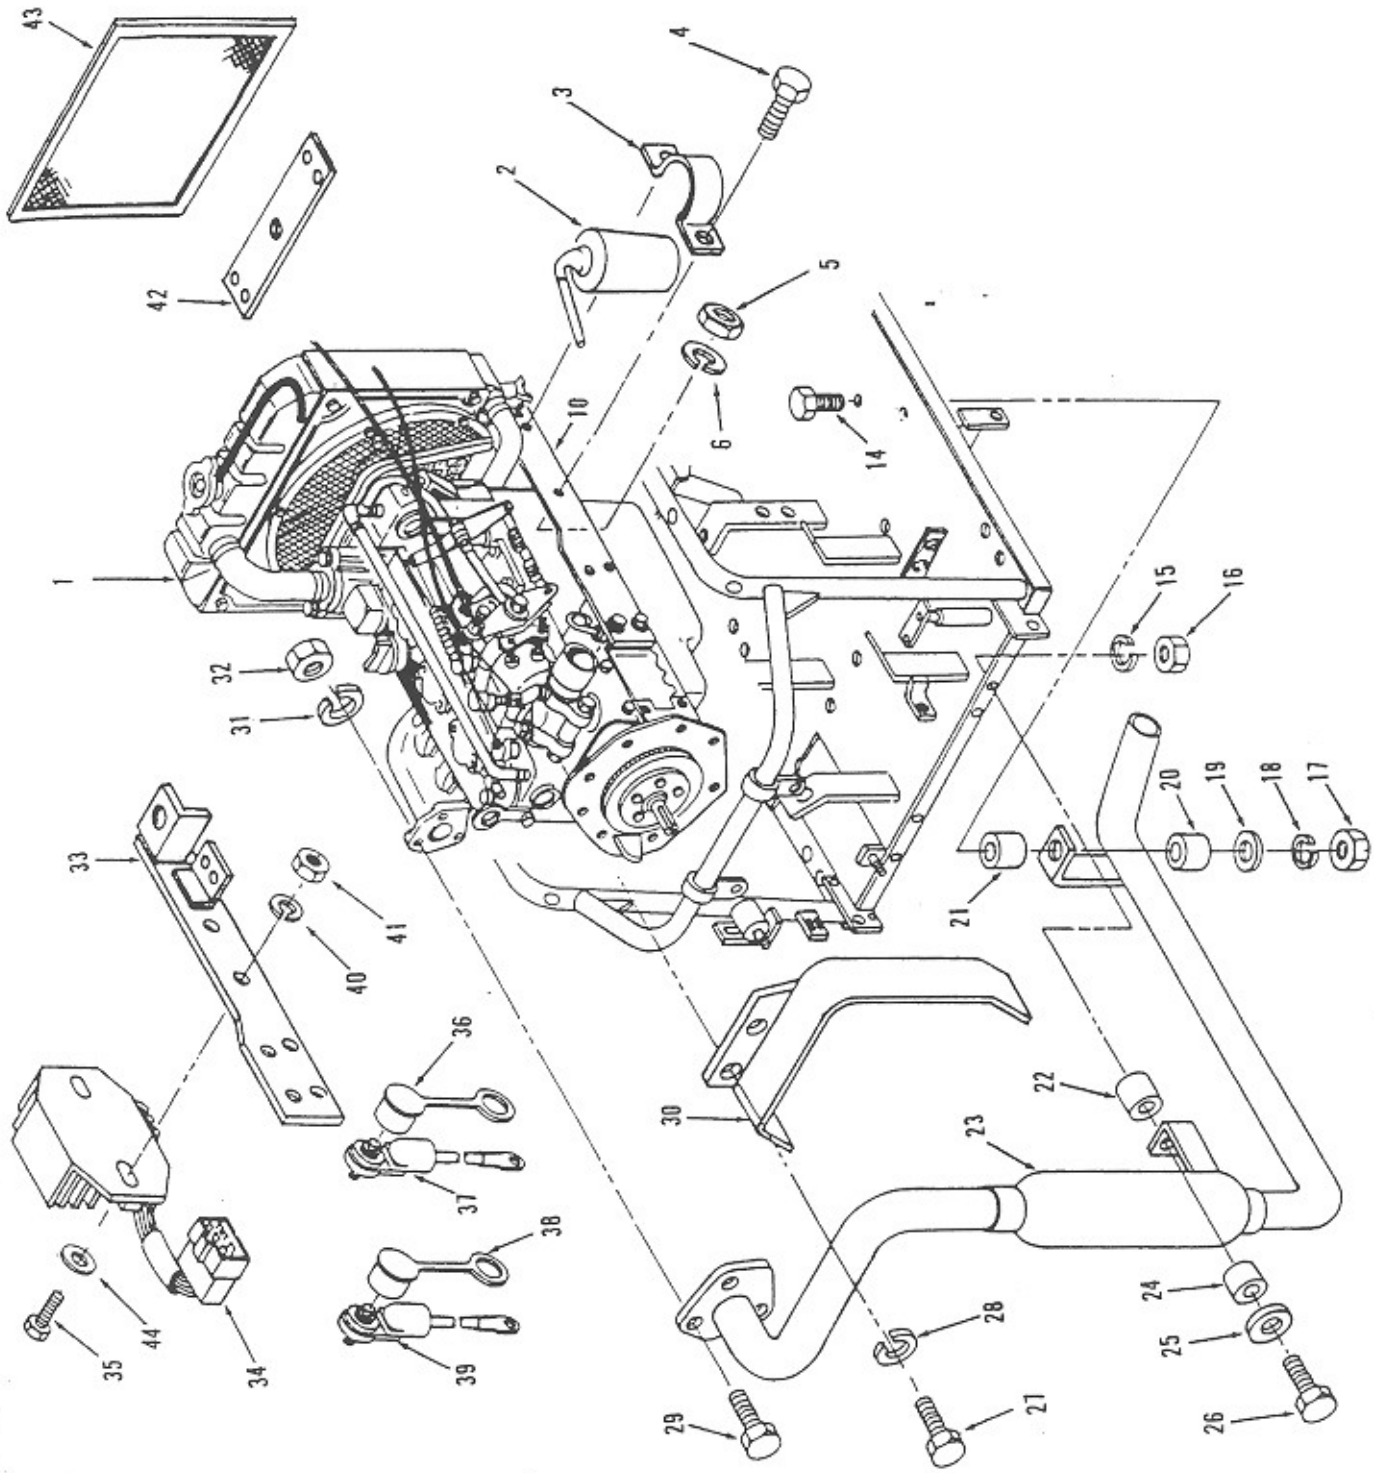

FIGURE 3. TRACTOR, EXPLODED VIEW

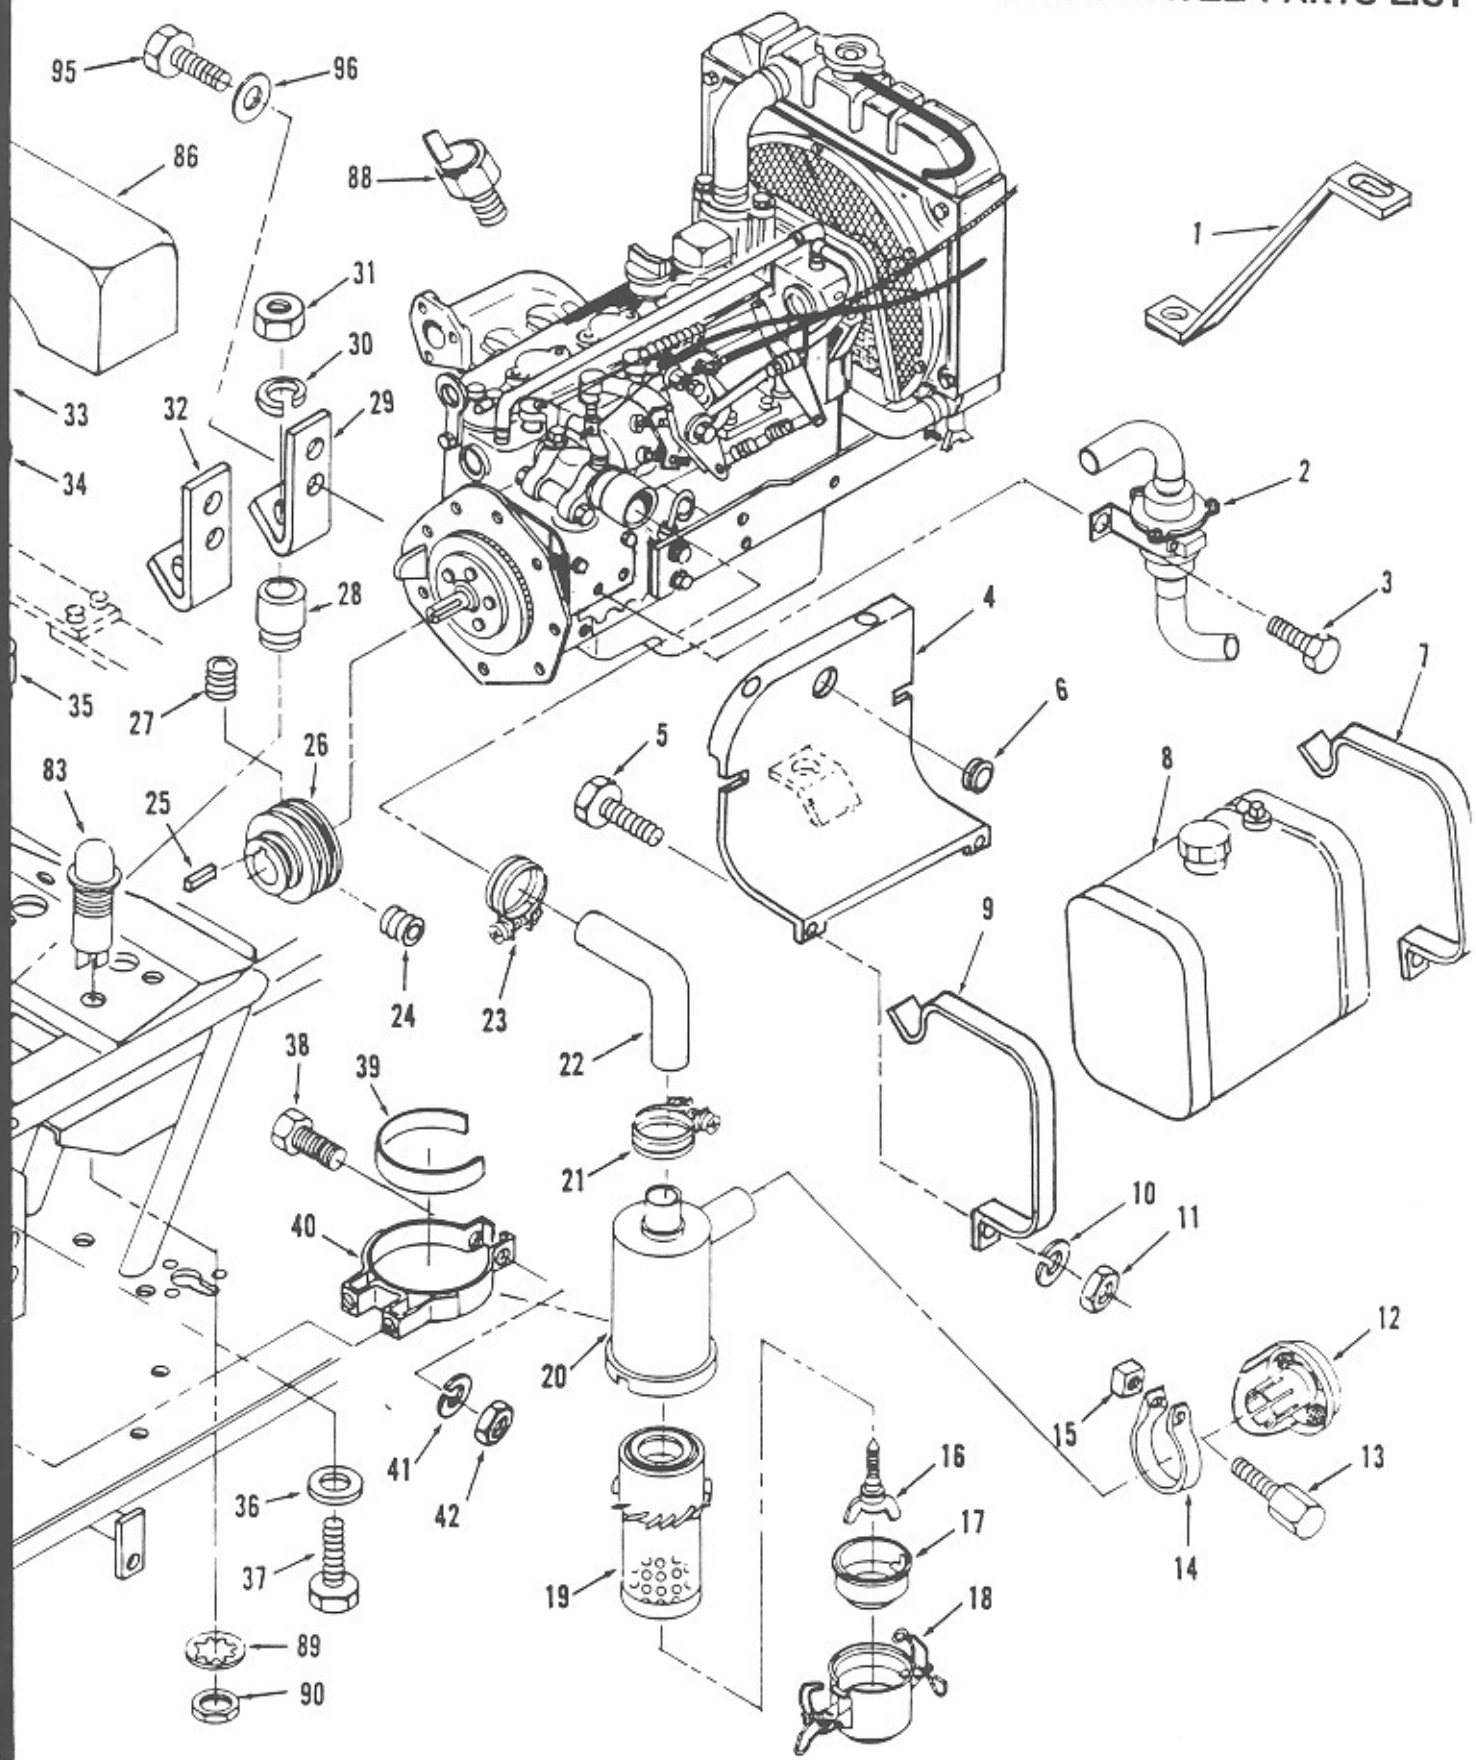
95
96
86
88
31
30
29
33
32
34
28
35
27
26
83
25
24
23
22
38
39
21
40
20
41
42
36
37
19
89
90
16
17
18
1
2
3
4
6
5
7
8
9
10
11
12
15
13
14

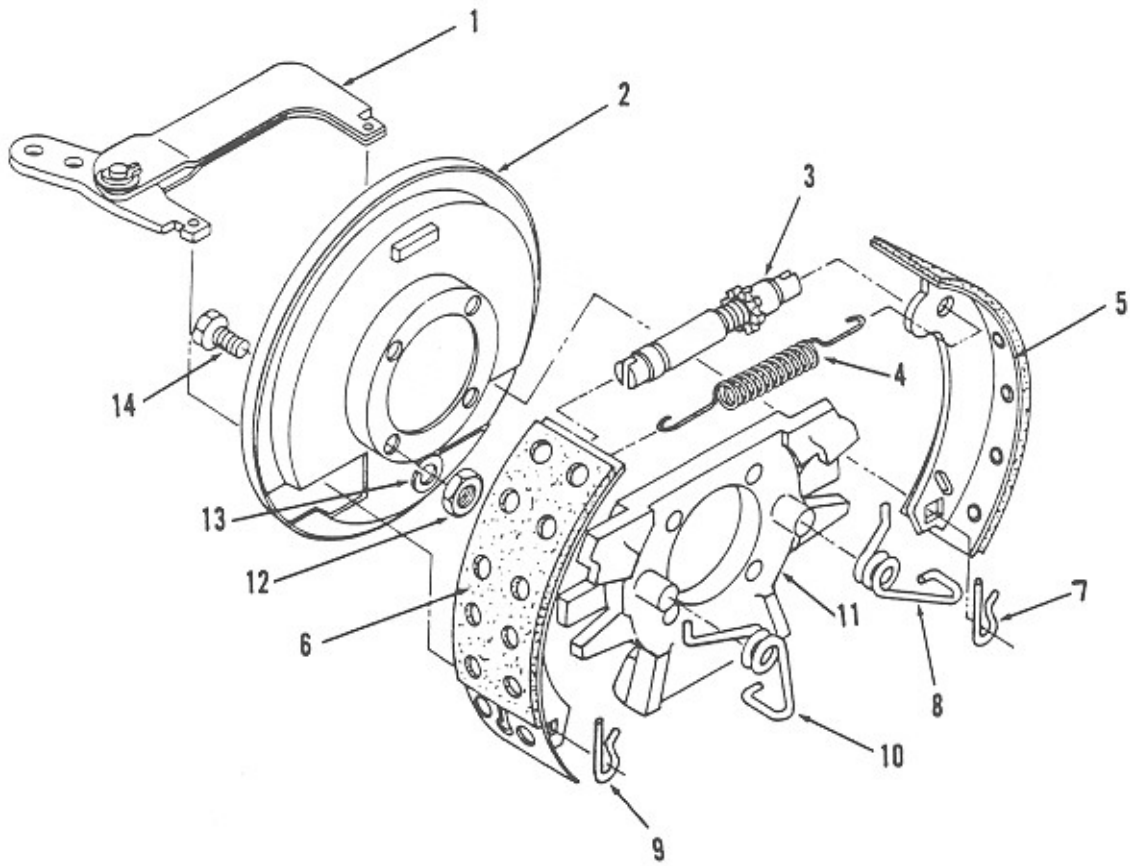

FIGURE 5. BRAKE ASSEMBLY, EXPLODED VIEW

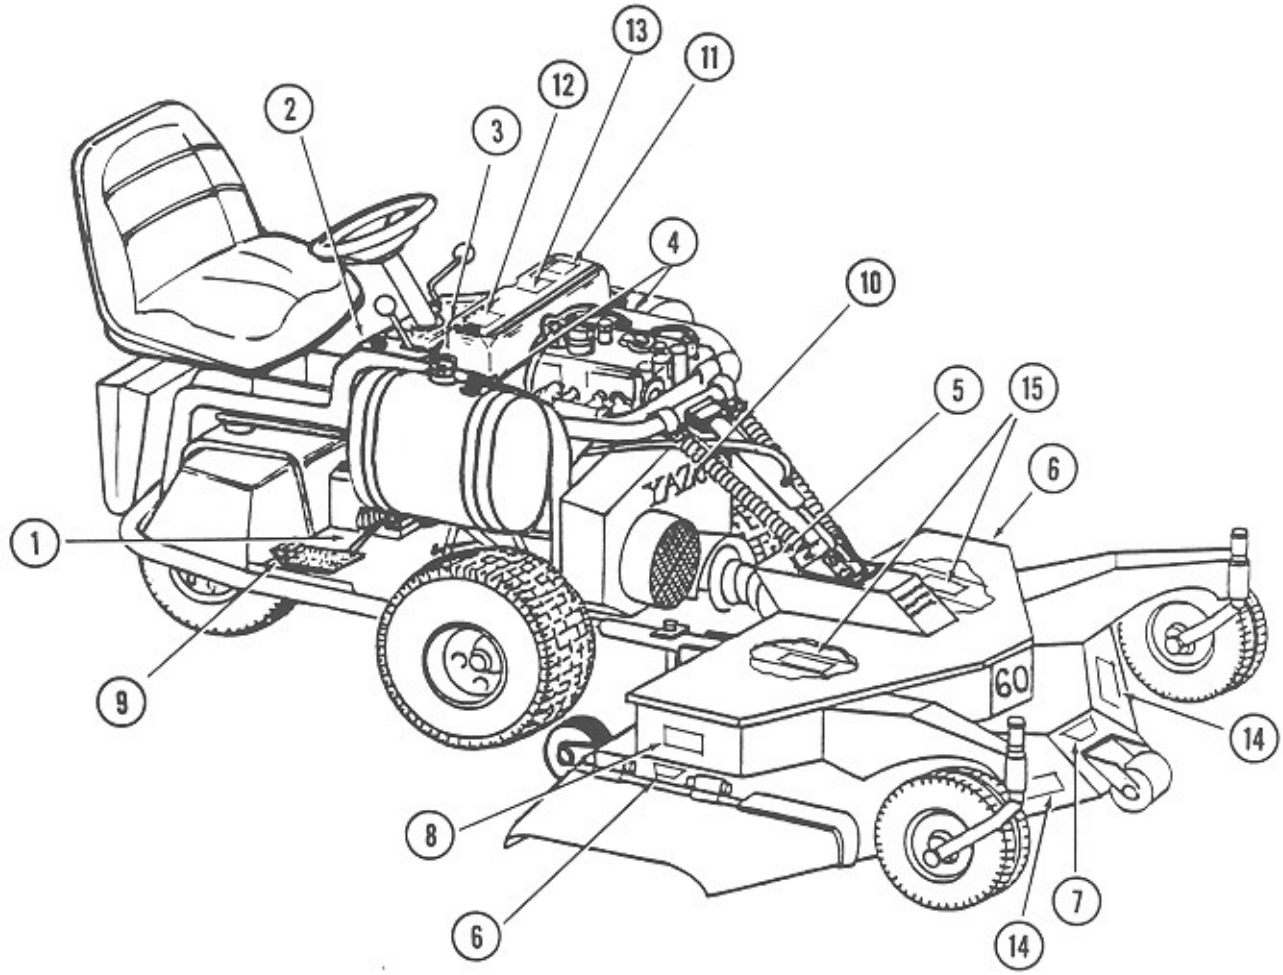

FIGURE 6. WARNING AND CAUTION DECAL PLACEMENT

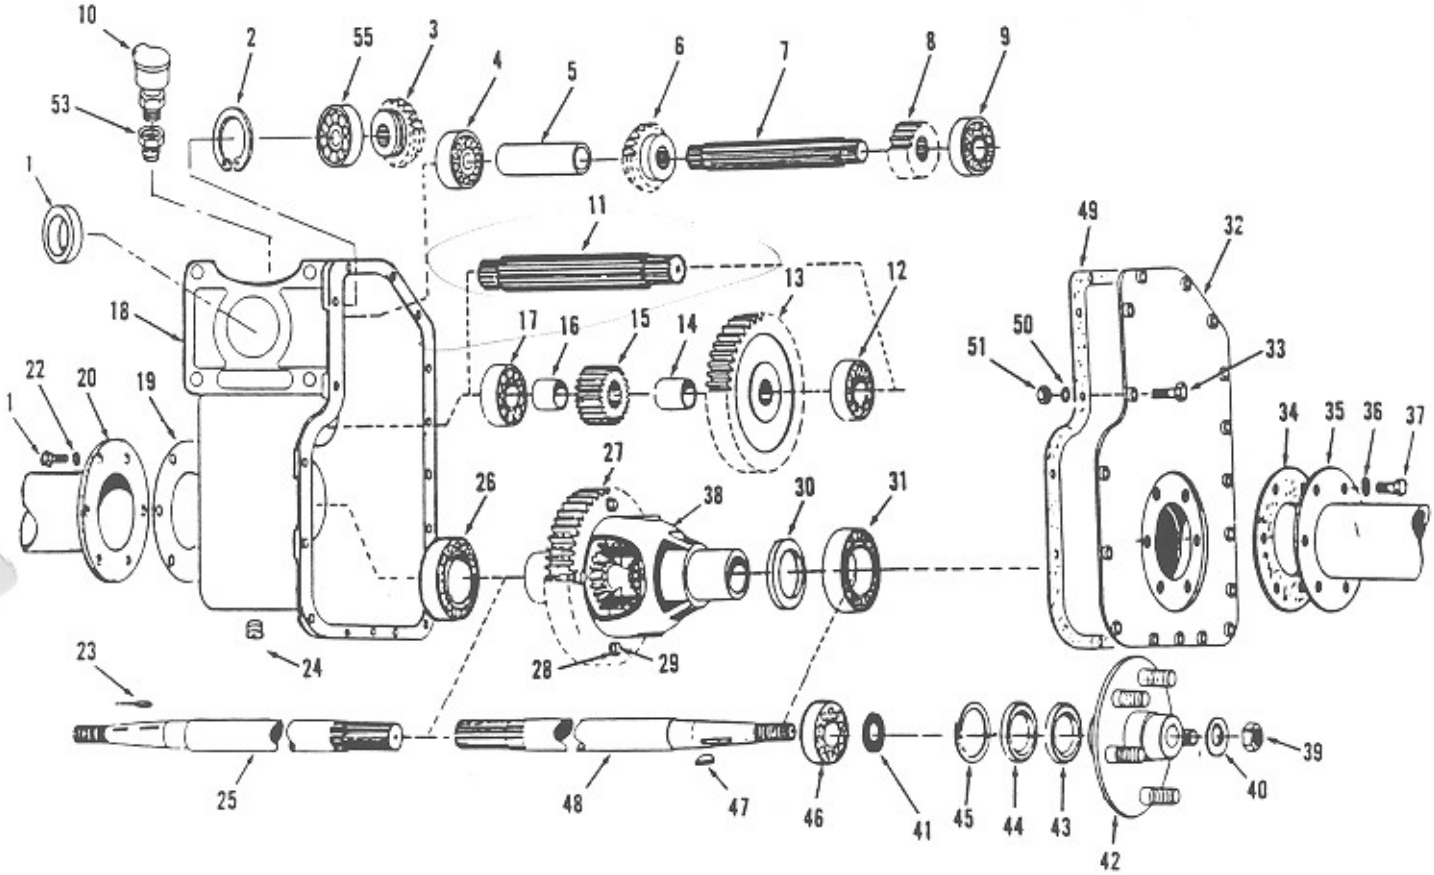

FIGURE 7. HYDROSTATIC DIFFERENTIAL, EXPLODED VIEW

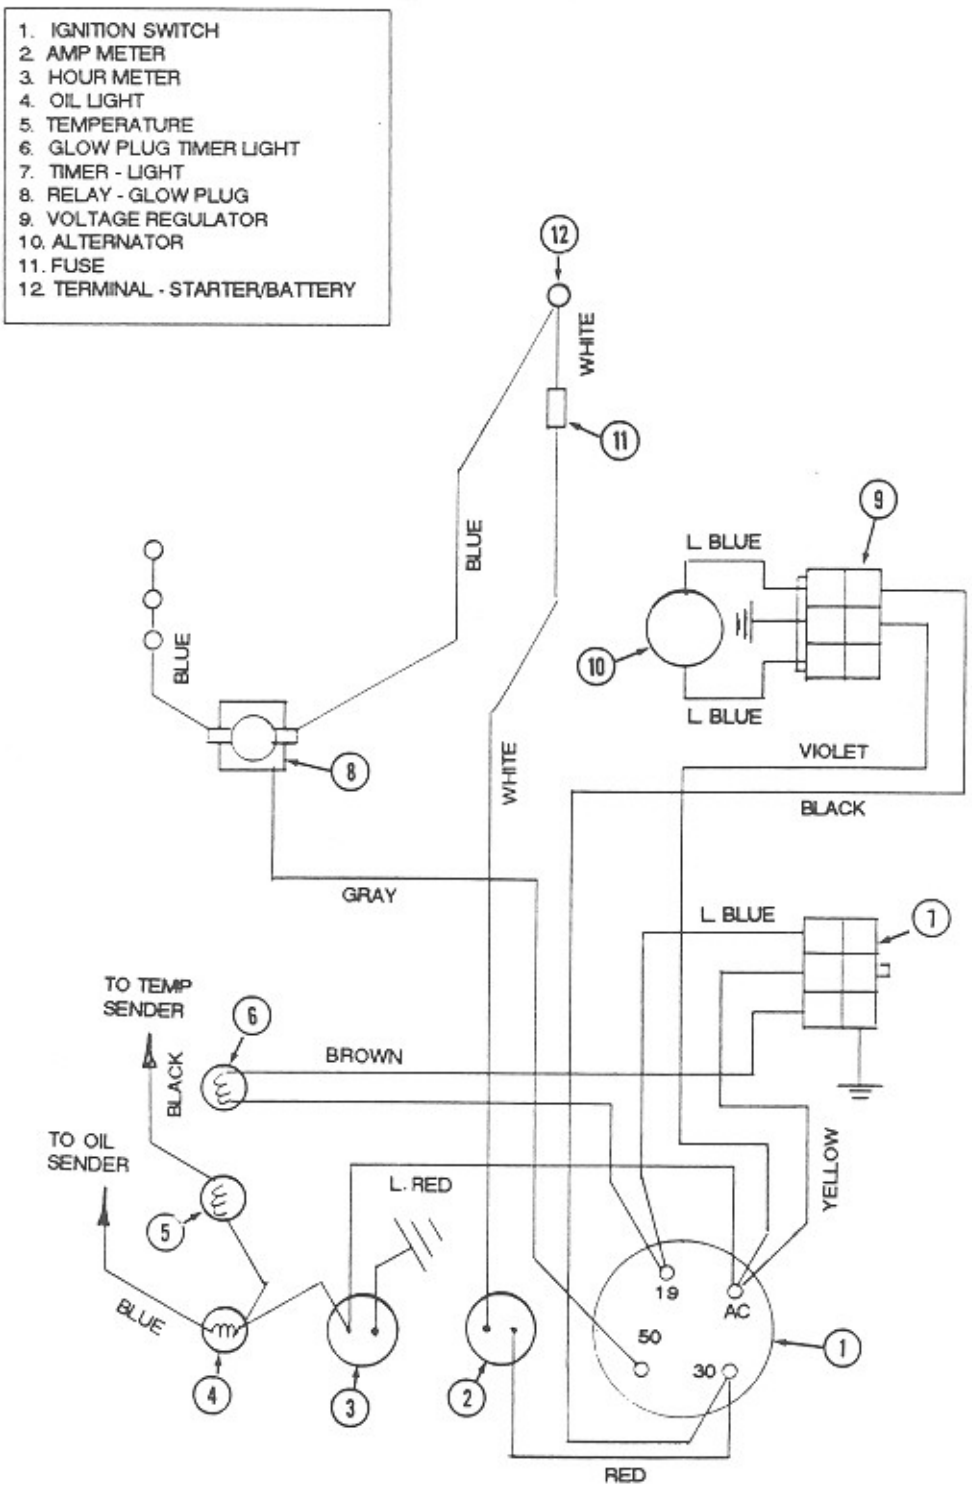

WIRING DIAGRAM